



Yellow Products

630-293-8013

Toll Free 877-"SAVE"TY-1

Fax 630-876-1993

Pivot Gate Installation Instructions

Included:

• 2 Cross bars

• 4 Metal Washers

• 2 Nuts

• 2 Bolts

1. Upon receiving Pivot Gate (Figure 1) unpack and unfold the gate such that the baseplates and rubber feet at each end of the gate are all touching the floor (Figure 2).
2. As shown in Figure 3, line the front edge up such that the rubber feet at the end of the front edge align with the edge of the mezzanine.
3. One aligned, install anchors into the baseplates.



Figure 3



Figure 1



Figure 2

4. Locate holes on beams (Figure 4, circled in red).
5. Lifting one end of the Pivot Gate, using the nuts and bolts provided, install the crossbars as shown in Figure 5.



Figure 4



Figure 5



Yellow Products

630-293-8013

Toll Free 877-"SAVE"TY-1

Fax 630-876-1993

6. Once the baseplates have been anchored and The crossbars have been secured, the gate is ready for use (Figures 6 – 8).



Figure 6 – Gate ready to receive pallet

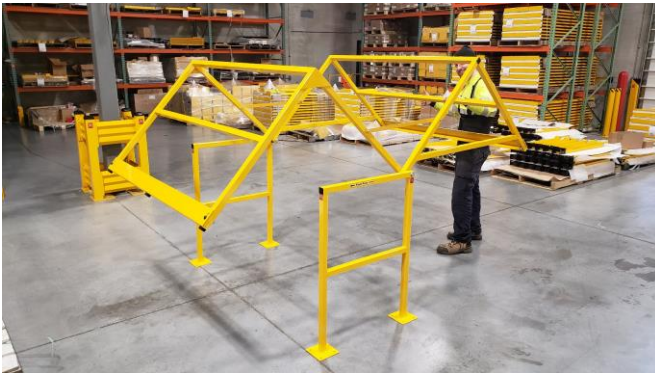


Figure 7 – Lifting up gate once pallet has been placed

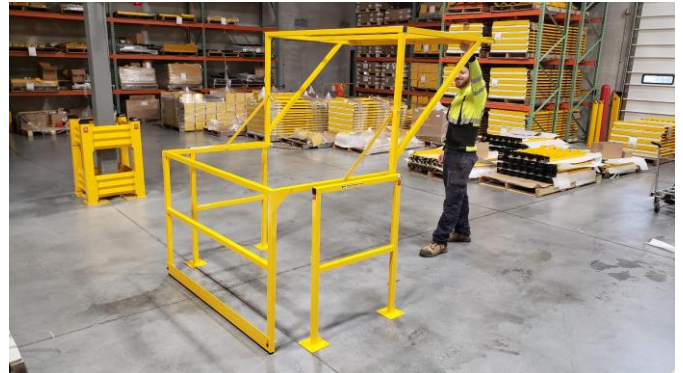


Figure 8 – Gate closed on mezzanine edge and pallet is now safely accessible to employees unloading the pallet.