



# Yellow Products

630-293-8013

Toll Free 877-"SAVE"TY-1

Fax 630-876-1993

## Twin Rail Installation Instructions (Drop-In, Lift-Out Style)

1. Arrange corner, end, and inline posts as necessary for installation. DO NOT drill mounting holes yet.
2. Once arranged, place the bottom rail in the sleeve first for the entire layout. The rail should be loose in the sleeve – about ¼" gap.
3. Put the quick release hardware in the bottom rail by:
  - 3a. Line up the holes in the sleeve and the rail (Figure 1)
  - 3b. Open the quick-release hardware by sliding the end of the clip off of the bolt (Figure 2)
  - 3c. Put the bolt through the holes of the rail and the sleeve that were lined up (Figure 3)
  - 3d. Close the quick release hardware (Figure 4)
  - 3e. Repeat steps 3a – 3d for the other end of the rail.
3. Put chalk line down.
4. Move posts to line.
5. Put top rail in sleeves.
6. Repeat steps 3a – 3d to put the quick release hardware on both ends of the top rail.
7. Drill one hole at a time and anchor prior to moving to next hole.
8. Place nut at the top of the anchor, but do not expose the threads.
9. Use a hammer to pound the anchor into the hole until the base of the nut reaches the top baseplate of the post.
10. Use an impact wrench to tighten the nut until it is tight.
11. Use a rubber mallet to drive on the black, steel cap to the top of each post.
12. Done!

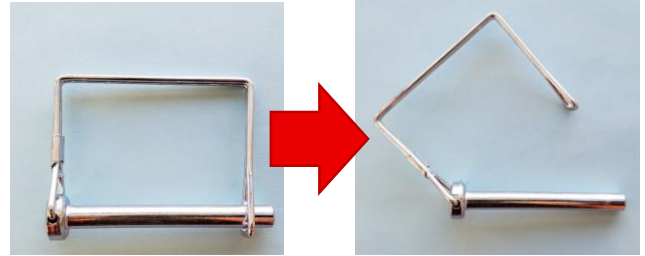


Figure 1



Figure 2



Figure 3



Figure 4